




LH816 WITH TRACK ARM TOP JAMB INSTALLATION INSTRUCTIONS

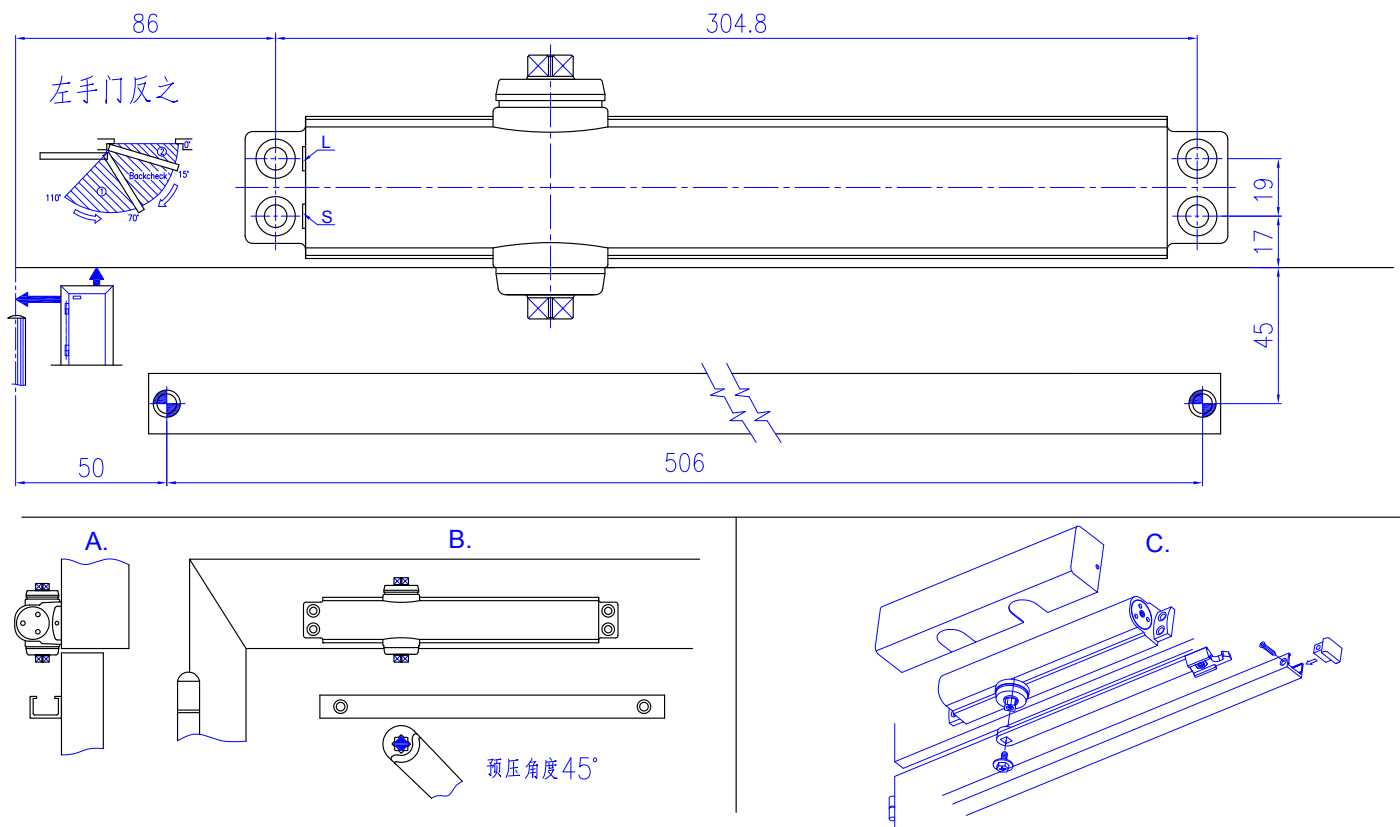

Not to Scale

The use of non-clutching impact drivers to install this hardware will automatically void the warranty.
 All product specifications are subject to change.

LH816 WITH TRACK ARM STANDARD INSTALLATION INSTRUCTIONS

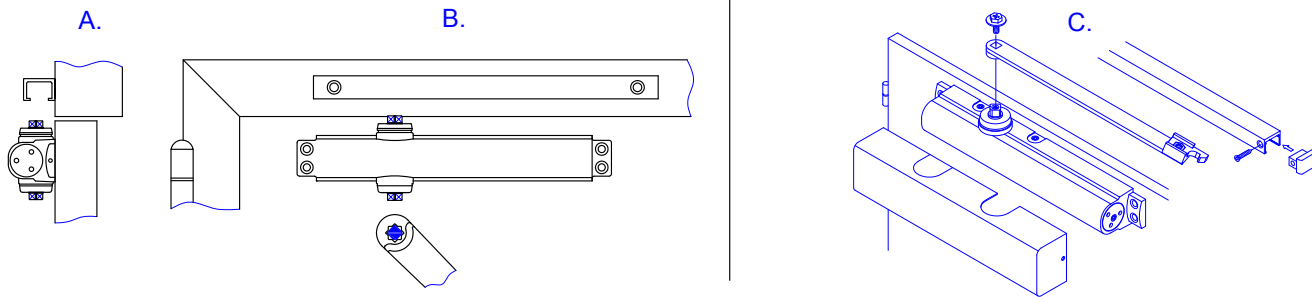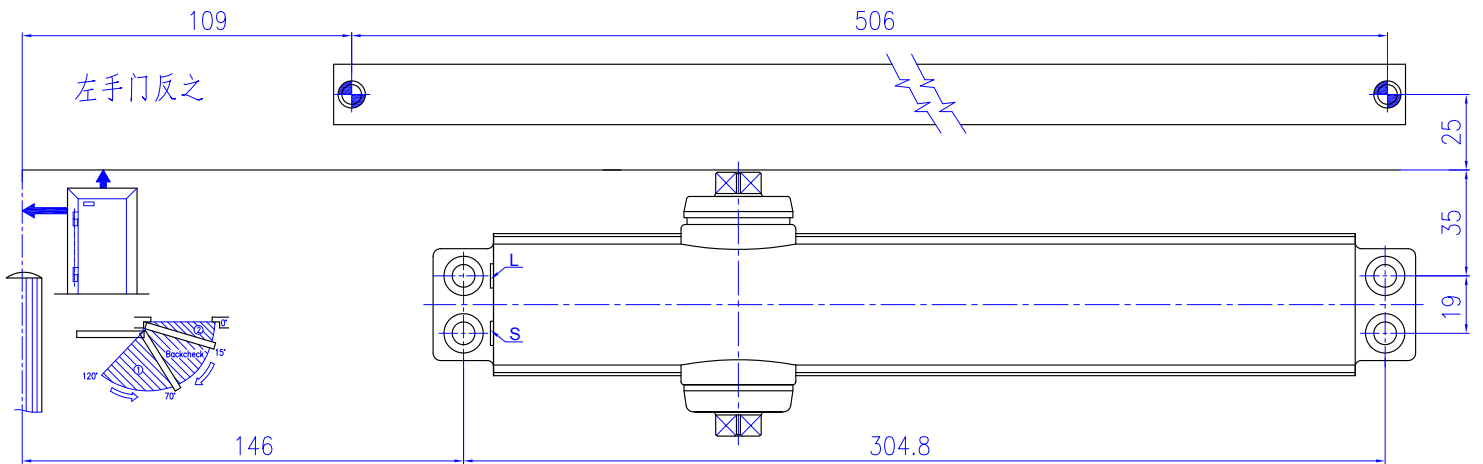

Not to Scale

The use of non-clutching impact drivers to install this hardware will automatically void the warranty.
 All product specifications are subject to change.