



1. Loosen hold open nut
2. Open door to desired hold position and tighten hold open nut securely.

Note:  
 1. Hold Open angle has been preset between 90° and 100°  
 2. Hold open arm mounting position is the same with standard arm.

Not to Scale

The use of non-clutching impact drivers to install this hardware will automatically void the warranty.  
 All product specifications are subject to change.