
Installation Instruction For LH58L Escutcheon Lever Trim Device



Not to Scale


The use of non-clutching impact drivers to install this hardware will automatically void the warranty.

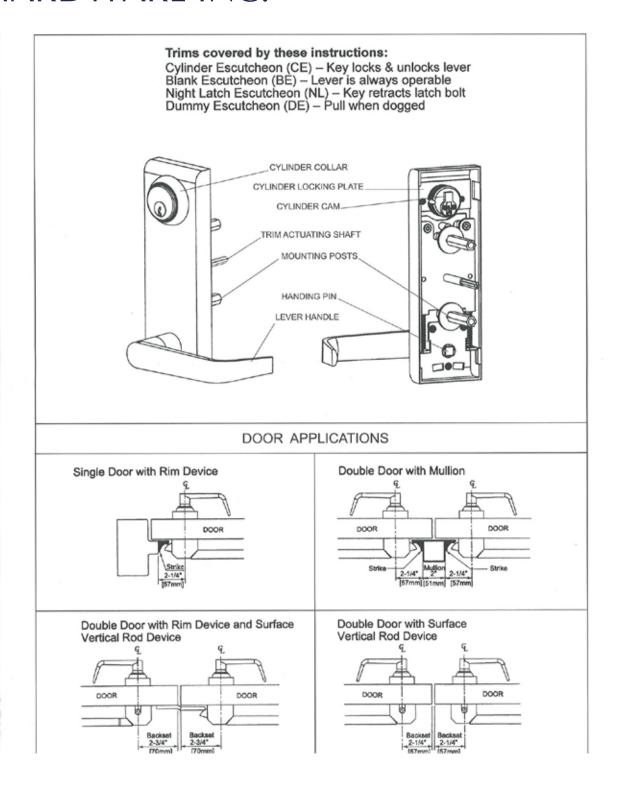

Installation Instruction For LH58L Escutcheon Lever Trim Device


SET TRIM HANDING

- Rotate lever handle to right or left direction to match desired door handling. (See Fig. 1.)
 In case the handle is knob type, skip to Step 2.
- 2. Insert the square spindle into the hub. (See Fig. 2.)
- 3. Proceed with EXIT DEVICE INSTRUCTIONS.

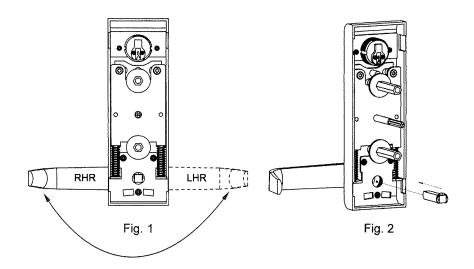

INSTALL MORTISE CYLINDER

- 1. Slide wave washer and cylinder collar onto mortise cylinder body. (See Fig. 3.)
- 2. Screw cylinder into escutcheon trim with cam up positioned. (See Fig. 4.)
- 3. Install cylinder locking plate and fasten it with provided screws. (See Fig. 5.)
- 4. Blank Escutcheon (passage function) and Dummy Escutcheon skip these steps.

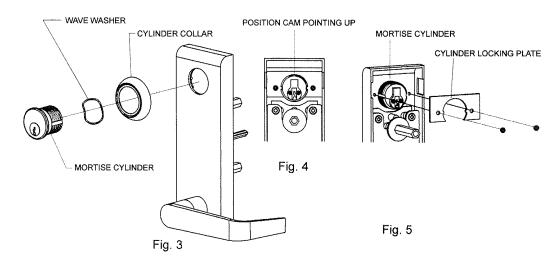


Not to Scale

The use of non-clutching impact drivers to install this hardware will automatically void the warranty.




MARK AND DRILL MOUNTING HOLES ON DOOR

- 1. Mark horizontal centerline by matching it to the centerline of exit device, which can be found on the inside face of door.
- 2. Apply template to the door using centerline. Refer to Applications Section on page 1 to determine the location of the vertical centerline. This vertical centerline should match the centerline of exit device located on the inside
- 3. Mark and drill 7/16" holes for mounting posts as shown on template.
- 4. Mark and drill 1/2" holes for the trim actuating shaft, which mates with the exit device. See exit device instructions for details.

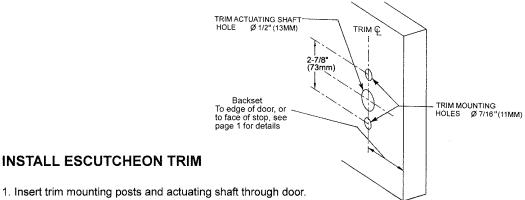

- 2. Mate trim actuating shaft with cam on back of the device chassis.
- 3. Fasten the trim from the device mounting plate with provided screws.
- 4. Test installation by operating lever / knob handle or key to verify trim activates exit device.
- 5. Note: Dummy trim is only for pulling door, handle does not rotate.

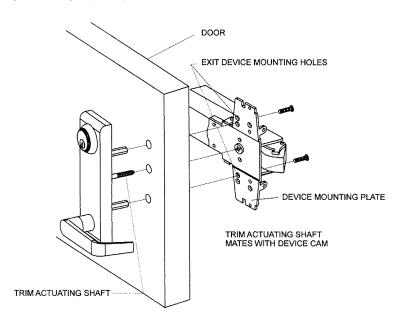

Not to Scale

The use of non-clutching impact drivers to install this hardware will automatically void the warranty.