


# LAWRENCE® HARDWARE INC.

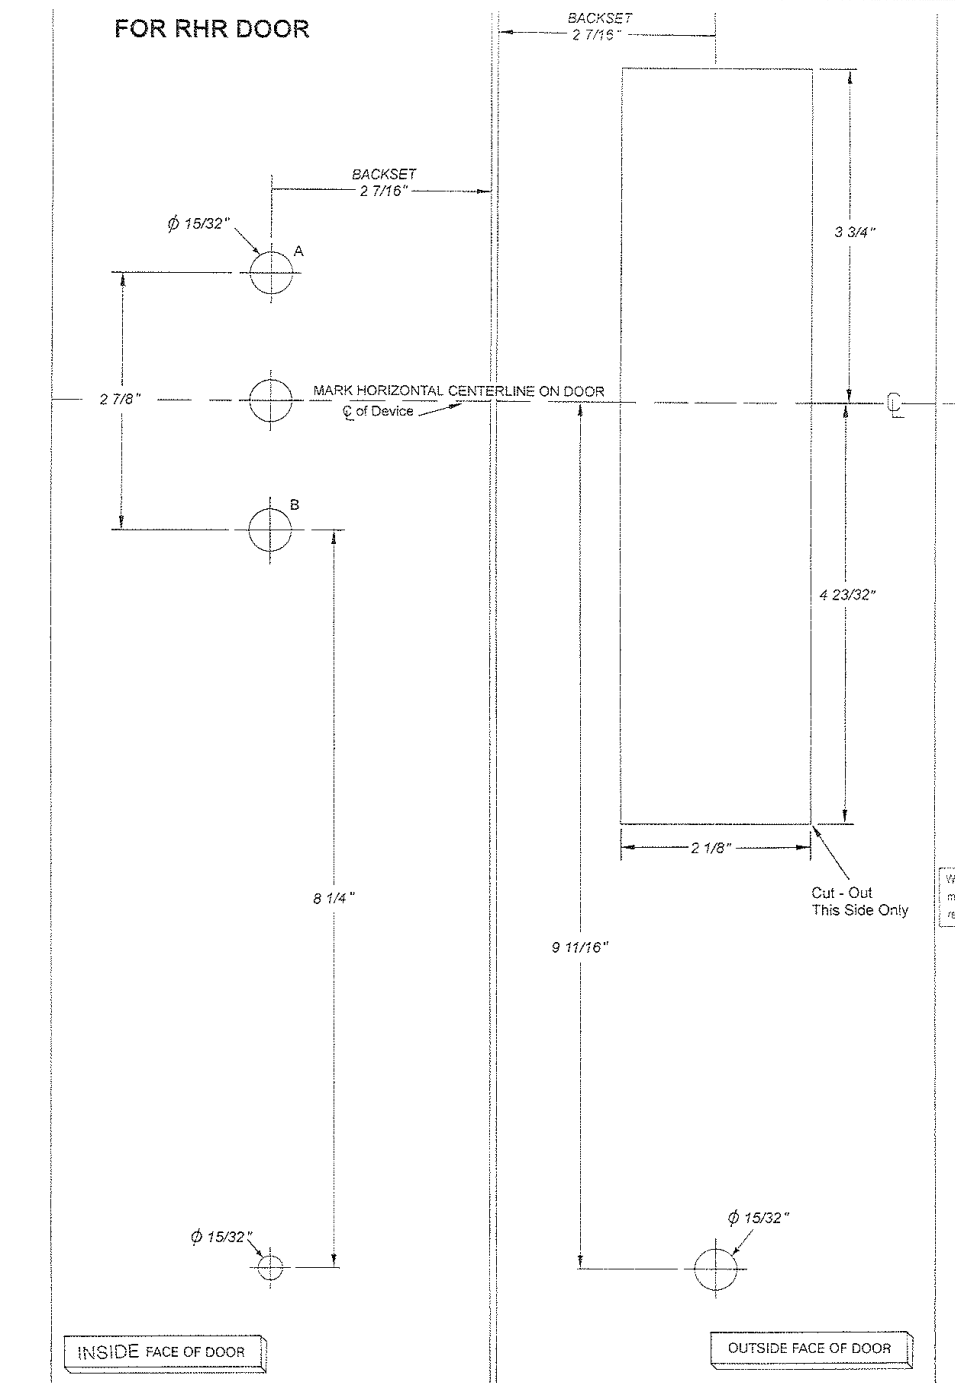

**Simple Instructions:**


1. Install a Mortise Cylinder with supplied Cylinder Holding Nut.
2. If door is already drilled and cut, insert the trim into the holes from outside of the door, then fasten by three mounting screws from inside of the door (the upper two screws must go through the chassis of the exit device then A & B two holes).

- For single door and double door with mullion use, the backset 2 - 7/16" is to face of stop.
- For double door without mullion use, the backset 2 - 7/16" is to edge of door.

Not to Scale

The use of non-clutching impact drivers to install this hardware will automatically void the warranty.

# LAWRENCE® HARDWARE INC.

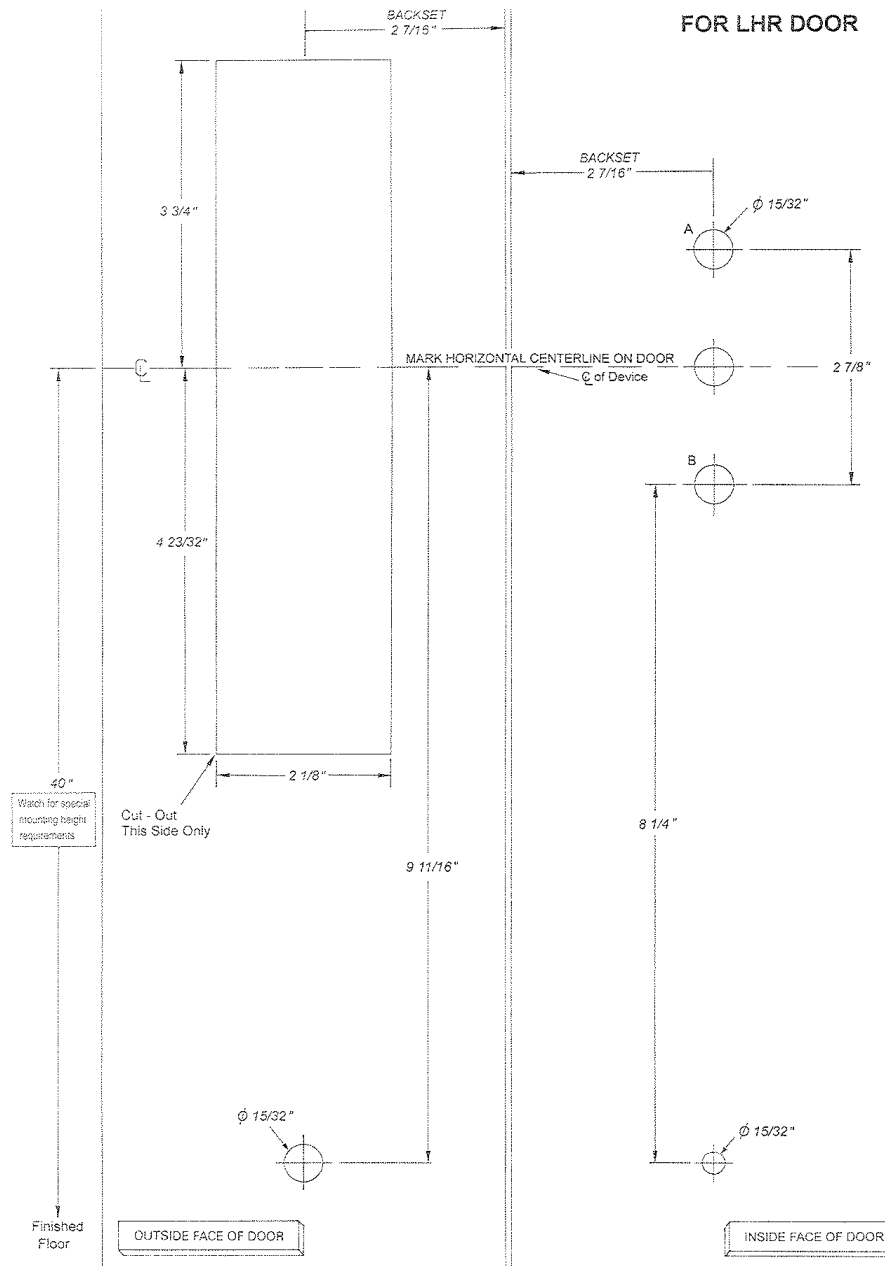

**Simple Instructions:**

1. Install a Mortise Cylinder with supplied Cylinder Holding Nut.
2. If door is already drilled and cut, insert the trim into the holes from outside of the door, then fasten by three mounting screws from inside of the door ( the upper two screws must go through the chassis of the exit device then A & B two holes).

- For single door and double door with mullion use, the backset 2 - 7/16" is to *face of stop*.
- For double door without mullion use, the backset 2 - 7/16" is to *edge of door*.

Not to Scale

The use of non-clutching impact drivers to install this hardware will automatically void the warranty.