
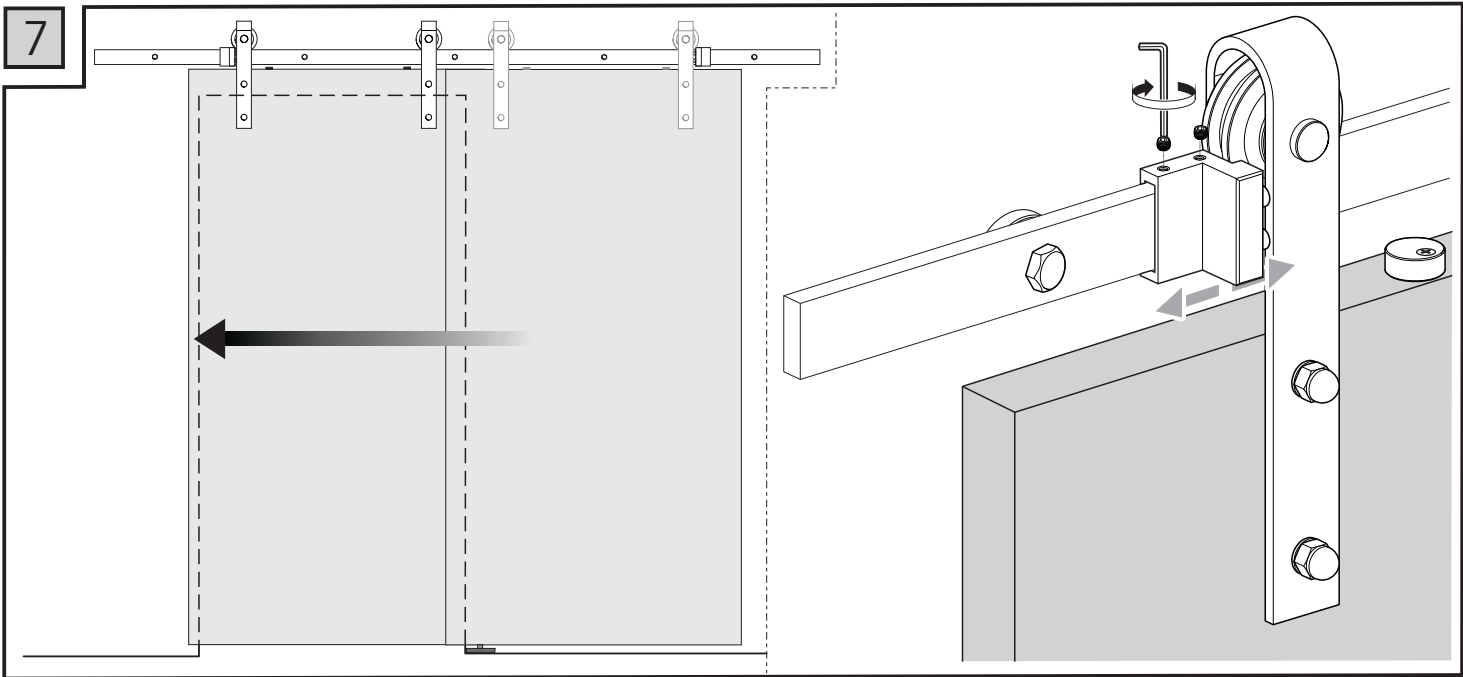


Not to Scale

The use of non-clutching impact drivers to install this hardware will automatically void the warranty.

**WB700/TR07-W1 Installation Instruction For Wooden Door**

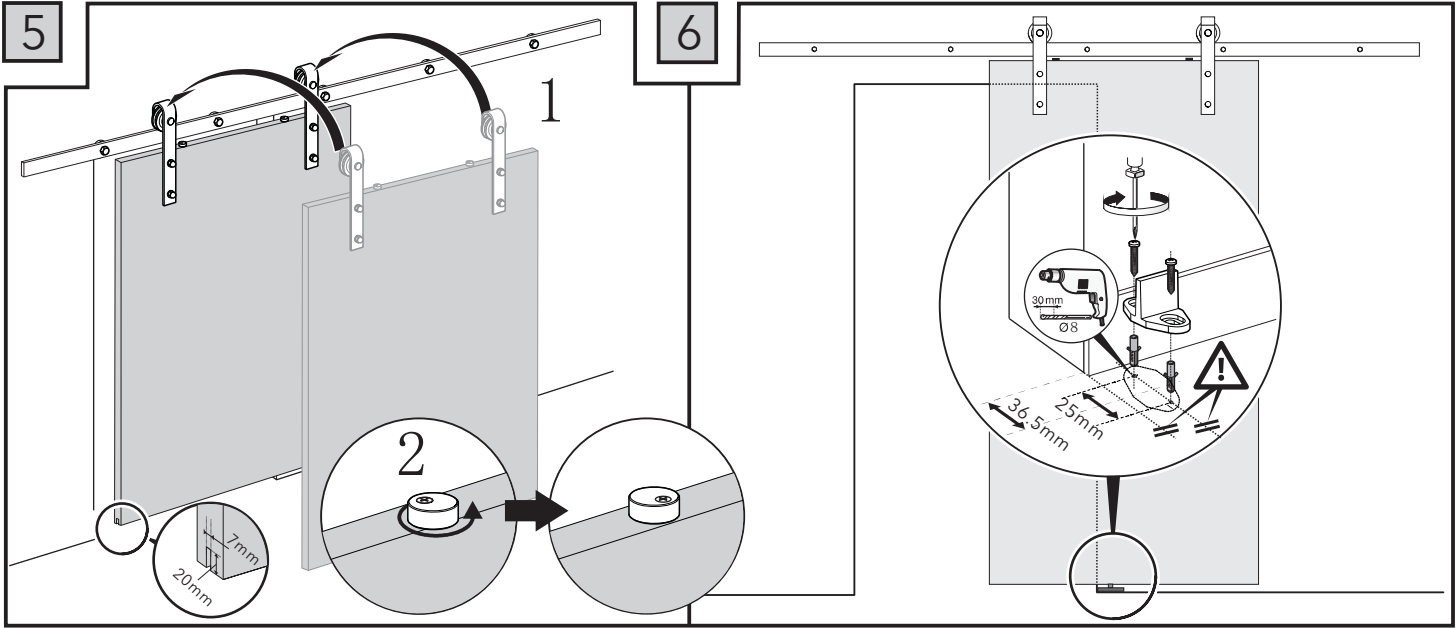

- 2000=78.74"
- 450=17.72"
- 100=3.94"
- 43=1.69"
- 40=1.57"
- 90=3.54"
- 150=5.91"