


### 3D Adjustable Conceal Hinge Fitting Instructions (for wood door)

Model : ZA-AH01


for unrebated interior doors

door weight  $\leq 40\text{kg}/2\text{pc}$  door width  $\leq 900\text{mm}$  door thickness  $\geq 35\text{mm}$


#### Installation

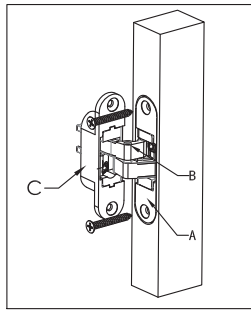

1. Install hinge on the door leaf, with adjusting hole B always up, hinge part A on door leaf & hinge part C on door frame

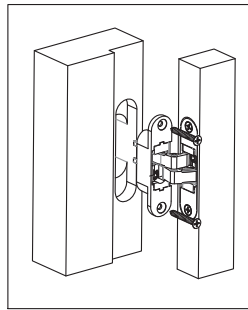


2. Install hinge on the door frame

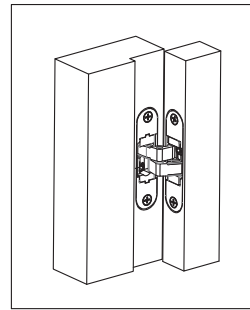


3. Finish the installation


#### Hinge Adjustment

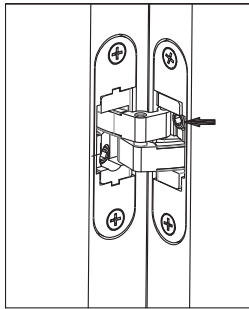


Depth Adjustment:  
Use an allen key to twist the screw (arrow marked)  
depth adjustment:  $\pm 1.0\text{mm}$

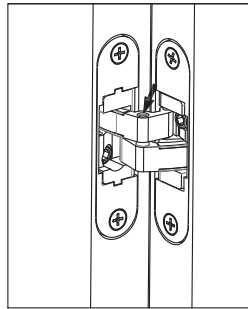

Height Adjustment:  
Use an allen key to twist the screw (arrow marked)  
height adjustment:  $\pm 1.5\text{mm}$

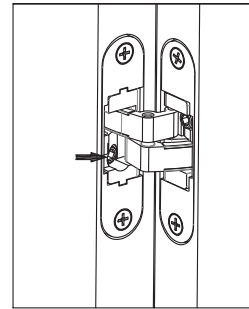

Side Adjustment:  
Use an allen key to twist the screw (arrow marked)  
side adjustment:  $\pm 1.0\text{mm}$

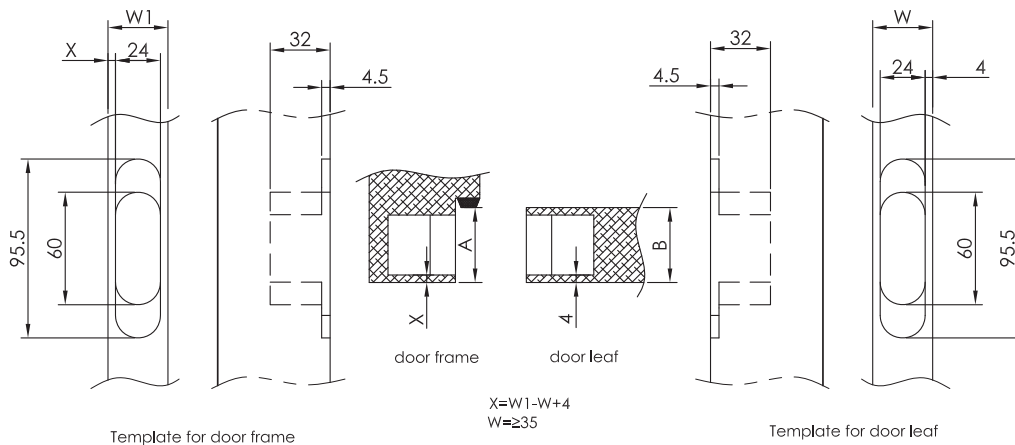

Not to Scale