


3D Adjustable Conceal Hinge Fitting Instructions (for wood door)


Model:ZA-AH03

for unrebated interior doors door weight ≤80kg/2pc door width ≤ 1000mm door thickness ≥35mm


Installation

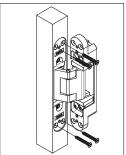

1. Install hinge on the door leaf, with hinge part stamping marked with " DOOR " on door leaf

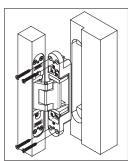


2. Install hinge on the door frame

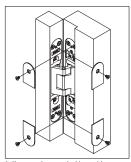

3. Fix cover plates on the hinge with screws after completion of adjustment


Hinge Adjustment

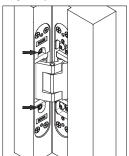


Just an allen key to twist the screws (arrow marked).

Both the upper and the lower screws are requested to be adjusted in the same way.

-side adjustment: ±2.5mm

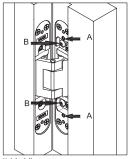

Height Adjustment: Height Adjustment:
-Slightly loosen the grab screws (arrow marked with A)
-Use an allen key to twist the screws (arrow marked
with B).
-Both the upper and the lower screws (arrow marked
with B) are requested to be adjusted and tightened in
the same way.
-Retighten the grab screws (arrow marked with A)
-height adjustment: ±2.5mm

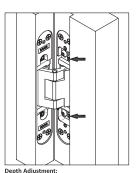


Jeepin Agissiment.

-Use an allen key to twist the screws (arrow marked).

-Both the upper and the lower screws are requested to be adjusted and tightened in the same way.

-depth adjustment: ±1.0mm

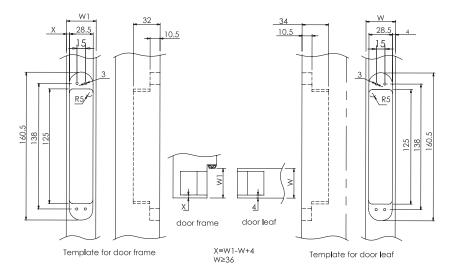

Not to Scale